

1

LISTA DE APLICACIONES - BUYERS GUIDE

1.9 TD (D8B (XUD9TF))	-12/00	Diesel	FWD	1905	66	90	11.94-07.02	■
1.9 TD (DHX (XUD9TF/BTF))	-12/00	Diesel	FWD	1905	66	90	11.94-07.02	■
1.9 TD (DHX (XUD9TF/BTF))	-12/00	Diesel	FWD	1905	66	90	11.94-07.02	■
1.9 TD (D8B (XUD9TF))		Diesel	FWD	1905	68	92	10.95-12.98	■
1.9 TD (D8B (XUD9TF))		Diesel	FWD	1905	68	92	10.95-12.98	■
2.0 HDi (RHZ (DW10ATED))		Diesel	FWD	1997	80	109	08.99-07.02	■
2.0 HDi (RHZ (DW10ATED))		Diesel	FWD	1997	80	109	08.99-07.02	■
2.0 HDi 16V (RHW (DW10ATED4))		Diesel	FWD	1997	80	109	09.99-07.02	■
2.0 HDi 16V (RHW (DW10ATED4))		Diesel	FWD	1997	80	109	09.99-07.02	■
2.1 TD (P8C (XUD11BTE))		Diesel	FWD	2088	80	109	05.96-07.02	■
2.1 TD (P8C (XUD11BTE))		Diesel	FWD	2088	80	109	05.96-07.02	■
JUMPY / DISPATCH (U6U_) 06.94-12.06					Bus (Minibus-M2-Segment)			
2.0 HDi 95 (RHX (DW10BTED))		Diesel	FWD	1997	69	94	10.99-10.06	■
2.0 HDi 95 (RHX (DW10BTED))		Diesel	FWD	1997	69	94	10.99-10.06	■
FIAT								
ULYSSE (220_) 06.94-08.02					MPV (Large MPV-M1 Segment)			
2.0 16V (220AQ5) (RFN (EW10J4))		Gasolina	FWD	1997	100	136	09.00-08.02	■
2.0 16V (220AQ5) (RFN (EW10J4))		Gasolina	FWD	1997	100	136	09.00-08.02	■
2.0 (220.AC5) (RFU (XU10J2C))		Gasolina	FWD	1998	89	121	06.94-08.02	■
2.0 (220.AC5) (RFU (XU10J2C))		Gasolina	FWD	1998	89	121	06.94-08.02	■
2.0 16V (RFV)		Gasolina	FWD	1998	97	132	05.98-09.00	■
2.0 16V (RFV)		Gasolina	FWD	1998	97	132	05.98-09.00	■
2.0 Turbo (220.AD5) (RGX (XU10J2CTE))		Gasolina	FWD	1998	108	147	06.94-08.02	■
2.0 Turbo (220.AD5) (RGX (XU10J2CTE))		Gasolina	FWD	1998	108	147	06.94-08.02	■
1.9 TD (220AH5) (DHX (XUD9TF/L))		Diesel	FWD	1905	66	90	02.95-08.02	■
1.9 TD (220AH5) (DHX (XUD9TF/L))		Diesel	FWD	1905	66	90	02.95-08.02	■
1.9 TD (DHX (XUD9TF/L))		Diesel	FWD	1905	68	92	05.97-12.99	■
1.9 TD (DHX (XUD9TF/L))		Diesel	FWD	1905	68	92	05.97-12.99	■
2.0 JTD (RHZ)		Diesel	FWD	1997	80	109	10.99-08.02	■
2.0 JTD (RHZ)		Diesel	FWD	1997	80	109	10.99-08.02	■
2.1 TD (P8C)		Diesel	FWD	2088	80	109	03.96-10.99	■
2.1 TD (P8C)		Diesel	FWD	2088	80	109	03.96-10.99	■
LANCIA								
ZETA (22_) 05.95-10.03					MPV (Large MPV-M1 Segment)			
2.0 16V (220AQ5, 220AQ4) (RFN)		Gasolina	FWD	1997	100	136	07.00-09.02	■
2.0 16V (220AQ5, 220AQ4) (RFN)		Gasolina	FWD	1997	100	136	07.00-09.02	■
2.0 16V (220AL5) (RFV (XU10J4R))		Gasolina	FWD	1998	97	132	05.98-07.00	■
2.0 16V (220AL5) (RFV (XU10J4R))		Gasolina	FWD	1998	97	132	05.98-07.00	■
2.0 Turbo (220AD5, 220CD5) (RGX (XU10J2TE))		Gasolina	FWD	1998	108	147	05.95-09.02	■
2.0 Turbo (220AD5, 220CD5) (RGX (XU10J2TE))		Gasolina	FWD	1998	108	147	05.95-09.02	■
2.0 JTD (220.AR5, 220.AN5) (RHZ (DW10ATED))		Diesel	FWD	1997	80	109	09.99-09.02	■
2.0 JTD (220.AR5, 220.AN5) (RHZ (DW10ATED))		Diesel	FWD	1997	80	109	09.99-09.02	■
2.0 JTD 16V (220AN5)		Diesel	FWD	1997	80	109	09.99-09.02	■
2.0 JTD 16V (220AN5)		Diesel	FWD	1997	80	109	09.99-09.02	■
2.1 TD (220AJ5) (P 8 C)		Diesel	FWD	2088	80	109	05.96-09.99	■
2.1 TD (220AJ5) (P 8 C)		Diesel	FWD	2088	80	109	05.96-09.99	■
PEUGEOT								

LISTA DE APLICACIONES - BUYERS GUIDE

806 (AF_) 06.94-02.03					Box Body/MPV (Large MPV-M1 Segment)			
2.0 (AFRGXC)		Gasolina	FWD	1998	108	147	02.97-05.00	■
2.0 (AFRGXC)		Gasolina	FWD	1998	108	147	02.97-05.00	■
TD (AFDHXC)		Diesel	FWD	1905	66	90	07.95-08.02	■
TD (AFDHXC)		Diesel	FWD	1905	66	90	07.95-08.02	■
HDi (AFRHZC)		Diesel	FWD	1997	80	109	06.99-02.03	■
HDi (AFRHZC)		Diesel	FWD	1997	80	109	06.99-02.03	■
DT (AFP8CB)		Diesel	FWD	2088	80	109	02.97-05.00	■
DT (AFP8CB)		Diesel	FWD	2088	80	109	02.97-05.00	■
806 (221) 06.94-08.02					MPV (Large MPV-M1 Segment)			
2.0 (RFU (XU10J2))		Gasolina	FWD	1998	89	121	06.94-08.02	■
2.0 (RFU (XU10J2))		Gasolina	FWD	1998	89	121	06.94-08.02	■
2.0 Turbo (RGX (XU10J2TE))		Gasolina	FWD	1998	108	147	06.94-08.02	■
2.0 Turbo (RGX (XU10J2TE))		Gasolina	FWD	1998	108	147	06.94-08.02	■
1.9 TD (DHX (XUD9TE))		Diesel	FWD	1905	66	90	07.95-08.02	■
1.9 TD (DHX (XUD9TE))		Diesel	FWD	1905	66	90	07.95-08.02	■
1.9 TD (D8B (XUD9TE))		Diesel	FWD	1905	68	92	05.97-08.02	■
1.9 TD (D8B (XUD9TE))		Diesel	FWD	1905	68	92	05.97-08.02	■
2.0 HDi (RHZ (DW10ATED))		Diesel	FWD	1997	80	109	08.99-08.02	■
2.0 HDi (RHZ (DW10ATED))		Diesel	FWD	1997	80	109	08.99-08.02	■
2.0 HDi 16V (RHW (DW10ATED4))		Diesel	FWD	1997	80	109	08.99-08.02	■
2.0 HDi 16V (RHW (DW10ATED4))		Diesel	FWD	1997	80	109	08.99-08.02	■
2.1 TD 12V (P8C (XUD11BTE))		Diesel	FWD	2088	80	109	06.96-08.99	■
2.1 TD 12V (P8C (XUD11BTE))		Diesel	FWD	2088	80	109	06.96-08.99	■
EXPERT (224_) 10.95-12.06					Bus (Minibus-M2-Segment)			
2.0 (RFN (EW10J4))		Gasolina	FWD	1997	100	136	07.00-12.06	■
2.0 (RFN (EW10J4))		Gasolina	FWD	1997	100	136	07.00-12.06	■
1.9 D (D9B (XUD9AU))		Diesel	FWD	1905	51	70	02.96-12.98	■
1.9 D (D9B (XUD9AU))		Diesel	FWD	1905	51	70	02.96-12.98	■
1.9 TD (DHX (XUD9TE))		Diesel	FWD	1905	66	90	02.96-09.00	■
1.9 TD (DHX (XUD9TE))		Diesel	FWD	1905	66	90	02.96-09.00	■
1.9 TD (D8B (XUD9TE))		Diesel	FWD	1905	68	92	02.96-05.98	■
1.9 TD (D8B (XUD9TE))		Diesel	FWD	1905	68	92	02.96-05.98	■
1.9 D		Diesel	RWD	1905	69	94	10.95-05.98	■
1.9 D		Diesel	RWD	1905	69	94	10.95-05.98	■
2.0 HDi (RHX (DW10BTED))		Diesel	FWD	1997	69	94	10.00-10.06	■
2.0 HDi (RHX (DW10BTED))		Diesel	FWD	1997	69	94	10.00-10.06	■
2.0 HDi (RHZ (DW10ATED))		Diesel	FWD	1997	80	109	07.00-12.06	■
2.0 HDi (RHZ (DW10ATED))		Diesel	FWD	1997	80	109	07.00-12.06	■
2.0 HDi (RHZ (DW10BTED))		Diesel	FWD	1997	80	109	07.00-12.06	■
2.0 HDi (RHZ (DW10BTED))		Diesel	FWD	1997	80	109	07.00-12.06	■
2.0 HDi (RHZ (DW10BTED+))		Diesel	FWD	1997	80	109	07.00-12.06	■
2.0 HDi (RHZ (DW10BTED+))		Diesel	FWD	1997	80	109	07.00-12.06	■
2.0 HDi (RHZ (DW10CTED))		Diesel	FWD	1997	80	109	07.00-12.06	■
2.0 HDi (RHZ (DW10CTED))		Diesel	FWD	1997	80	109	07.00-12.06	■
2.0 HDi 16V (RHW (DW10ATED4))		Diesel	FWD	1997	80	109	07.00-12.06	■
2.0 HDi 16V (RHW (DW10ATED4))		Diesel	FWD	1997	80	109	07.00-12.06	■
EXPERT (223) 12.95-12.06					Platform/Chassis (LCVs-N1 Segment)			
1.9 D (WJY (DW8B))		Diesel	FWD	1868	51	69	06.98-09.01	■

LISTA DE APLICACIONES - BUYERS GUIDE

1.9 D (WJY (DW8B))	Diesel	FWD	1868	51	69	06.98-09.01	■
1.9 D (WJZ (DW8))	Diesel	FWD	1868	51	69	06.98-09.01	■
1.9 D (WJZ (DW8))	Diesel	FWD	1868	51	69	06.98-09.01	■
1.9 D (D9B (XUD9AU))	Diesel	FWD	1905	51	70	02.96-12.98	■
1.9 D (D9B (XUD9AU))	Diesel	FWD	1905	51	70	02.96-12.98	■
1.9 TD (DHX (XUD9TE))	Diesel	FWD	1905	66	90	02.96-09.00	■
1.9 TD (DHX (XUD9TE))	Diesel	FWD	1905	66	90	02.96-09.00	■
1.9 TD (D8B (XUD9TE))	Diesel	FWD	1905	68	92	02.96-05.98	■
1.9 TD (D8B (XUD9TE))	Diesel	FWD	1905	68	92	02.96-05.98	■
2.0 HDi (RHX (DW10BTED))	Diesel	FWD	1997	69	94	10.00-10.06	■
2.0 HDi (RHX (DW10BTED))	Diesel	FWD	1997	69	94	10.00-10.06	■
2.0 HDi (RHW (DW10ATED4))	Diesel	FWD	1997	80	109	10.00-10.06	■
2.0 HDi (RHW (DW10ATED4))	Diesel	FWD	1997	80	109	10.00-10.06	■
EXPERT (222) 07.95-03.08					Van (LCVs-N1 Segment)		
1.9 D 70 (WJY (DW8B))	Diesel	FWD	1868	51	69	12.98-12.06	■
1.9 D 70 (WJY (DW8B))	Diesel	FWD	1868	51	69	12.98-12.06	■
1.9 D 70 (WJZ (DW8))	Diesel	FWD	1868	51	69	12.98-12.06	■
1.9 D 70 (WJZ (DW8))	Diesel	FWD	1868	51	69	12.98-12.06	■
1.9 D (D9B (XUD9AU))	Diesel	FWD	1905	51	70	02.96-12.98	■
1.9 D (D9B (XUD9AU))	Diesel	FWD	1905	51	70	02.96-12.98	■
1.9 TD (DHX (XUD9TE))	Diesel	FWD	1905	66	90	02.96-09.00	■
1.9 TD (DHX (XUD9TE))	Diesel	FWD	1905	66	90	02.96-09.00	■
1.9 TD (D8B (XUD9TE))	Diesel	FWD	1905	68	92	02.96-05.98	■
1.9 TD (D8B (XUD9TE))	Diesel	FWD	1905	68	92	02.96-05.98	■
2.0 HDi (RHX (DW10BTED))	Diesel	FWD	1997	69	94	07.00-12.06	■
2.0 HDi (RHX (DW10BTED))	Diesel	FWD	1997	69	94	07.00-12.06	■
2.0 HDi (RHZ (DW10ATED))	Diesel	FWD	1997	80	109	07.00-12.06	■
2.0 HDi (RHZ (DW10ATED))	Diesel	FWD	1997	80	109	07.00-12.06	■
2.0 HDi (RHZ (DW10BTED))	Diesel	FWD	1997	80	109	07.00-12.06	■
2.0 HDi (RHZ (DW10BTED))	Diesel	FWD	1997	80	109	07.00-12.06	■
2.0 HDi (RHZ (DW10BTED+))	Diesel	FWD	1997	80	109	07.00-12.06	■
2.0 HDi (RHZ (DW10BTED+))	Diesel	FWD	1997	80	109	07.00-12.06	■
2.0 HDi (RHZ (DW10CTED))	Diesel	FWD	1997	80	109	07.00-12.06	■
2.0 HDi (RHZ (DW10CTED))	Diesel	FWD	1997	80	109	07.00-12.06	■
2.0 HDi (RHW (DW10ATED4))	Diesel	FWD	1997	80	109	07.00-12.06	■
2.0 HDi (RHW (DW10ATED4))	Diesel	FWD	1997	80	109	07.00-12.06	■